



Fancoil Faire

NO.	MALFUNCTION & PROTECTION DEFINE	LED1 OPERATION	LED2 TIMER	LED3 DEF.FAN	LED4 ALARM	DISPLAY DIGITAL TUBE
1	Indoor fan motor speed out of control					E8
2	In-Outdoor unit COMM. Checking channel is abnormal					E1
3	Room TEMP. sensor checking channel is abnormal					E2
4	Pipe TEMP. Sensor checking channel is abnormal(T2)					E3
5	Pipe TEMP. Sensor checking channel is abnormal(T2B)					E4
6	EPPROM malfunction					E7
7	Water-level alarm malfunction					EE
8	Outdoor malfunction					Ed
9	Indoor twins communication malfunction					F3
10	Other malfunction of twins					F4

Light Flashing at 2.5HZ Flashing at 0.5HZ

Applicable to inverter air conditioner only



Fancoil Faire

•••	MALFUNCTION & PROTECTION DEFINE	LED 1 OPERATION	LED 2 TIMER	LED 3 DEF.FAN	LED 4 ALARM	DISPLAY DIGITAL TUBE
•	Room temperature sensor checking channel is abnormal		⊙			E2
•	Pipe temperature sensor checking channel is abnormal	⊙				E3
•	Outdoor TEMP. sensor checking channel is abnormal			⊙		E4
•	Outdoor unit malfunction	⊙	⊙	⊙	⊙	E6
•	Pump temperature sensor malfunction				⊙	E5
•	EEPROM malfunction	⊙	⊙			E7
•	Water-level alarm malfunction				⊙	E8
•	DC motor speed out of control		⊙		⊙	Eb
•	Outdoor unit low pressure malfunction	⊙	⊙	⊙		Ed
Light Flashing at 5HZ Flashing at 1HZ						

Applicable to fixed-frequency air conditioner only